


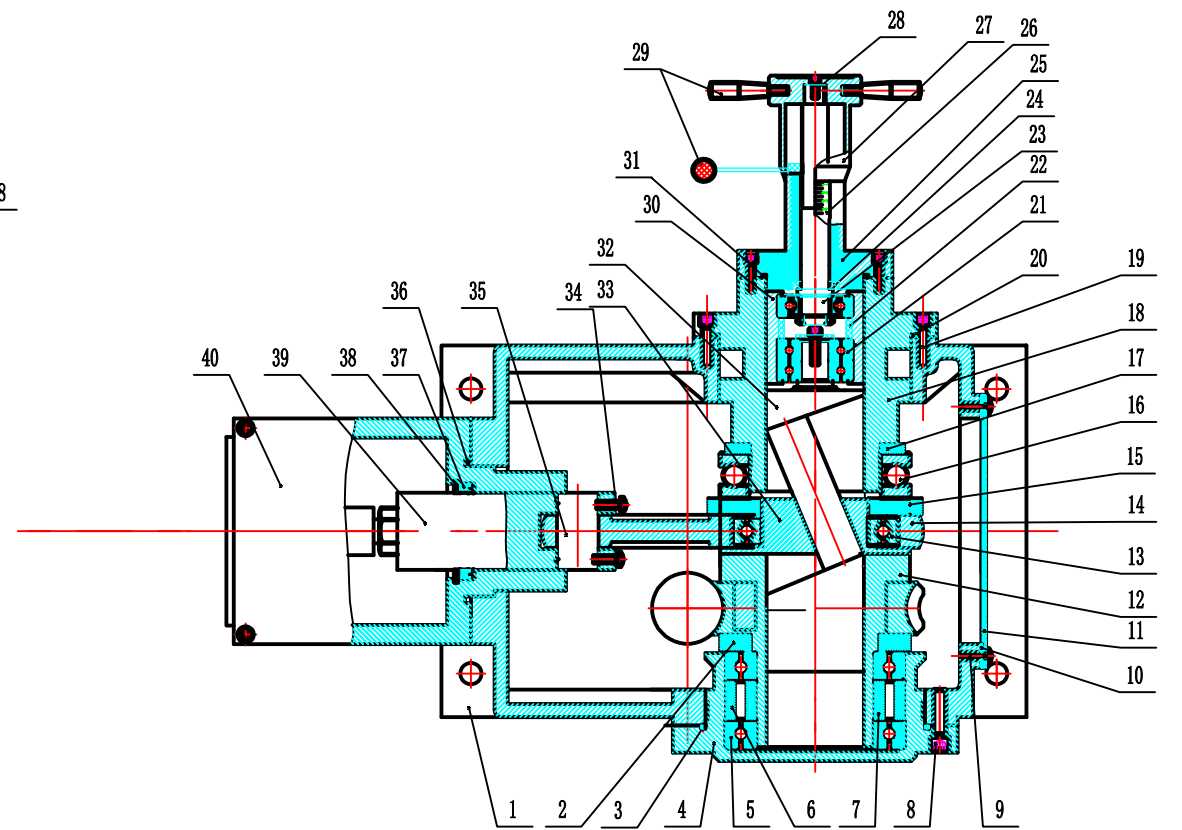

76		valve cover	4				
75		valve seat	4				
74		ball	4				
73		U shape seal	1				
72		Plunger lock	1				
71	GB	plunger screw nut	1				
70	GB	safety valve	1				
69		outlet check valve	1				
68	GB	front pump head	1				
67		slide valve	1				
66	GB	Diaphragm	1	PTFE			
65		inlet check valve	1				
64		Oil replenishment valve	1				
63		back pump head	1	45			

62	LJD01-033	packing seal					
61	LJD01-032	cylinder liner		45			
60	LJD01-031	lock nut		45			
59	LJD01-030	piston		45			
58	GB/T70.1-2000	bolt M16X20					
57	GB/T70.1-2000	bolt M12X55					
56	LJD01-	connecting rod joint	1				
55	GB	O ring	1				
54	LJD01-	worm gear	1	Z45n10-1			
53	GB/T1096-1979	key B32X90		45			
52	LJD01-0	worm	1	45			
51	GB/T297-1994	Tapered roller bearing 32208					
50	GB	bolt					
49	GB	spring washer					
48	LJD01-025	worm shaft key	1				
47	LJD01-024	motor shaft key	1				
46		coupling	1				
45	LJD01-023	motor base	1	HT200			
44	GB	bolt					
43	GB	spring washer					
42	GB	screw nut					

41		motor	1				
40	LJD01-023	head base cover	1	A3			
39	LJD01-022	slide rod	1	45			
38	GB/T893. 2-1986	B type hole circlip	1	80mm			
37	GB	U shape seal	1				
36	GB	O ring	1				
35	LJD01-021	pin	1	45			
34	GB/T893. 1-1986	hex socket screw M10X40	2				
33	LJD01-020	eccentric wheel	2				
32	LJD01-019	N crank	1	45			
31	GB	O ring	1				
30	LJD01-018	adjust seat	1	45			
29	LJD01-017	adjust handle					
28	GB/T70. 1-2000	lock screw M8X25					
27	LJD01-016	adjust handle wheel	1	45			
26	LJD01-015	scale	1	PVC			
25	LJD01-014	scale seat	1	HT200			
24	GB	skeleton oil seal	1				
23	LJD01-013	Adjust screw rod	1	45			
22	LJD01-012	Outside bearing spacing	1	45			
21	GB/T276-1994	deep groove ball bearing 4206					
20	GB	O ring	1				
19	GB/T70. 1-2000	hex socket screw M8X35					
18	LJD01-011	Eccentric wheel press block		HT200			

[illegible]