Model: HTSS-A

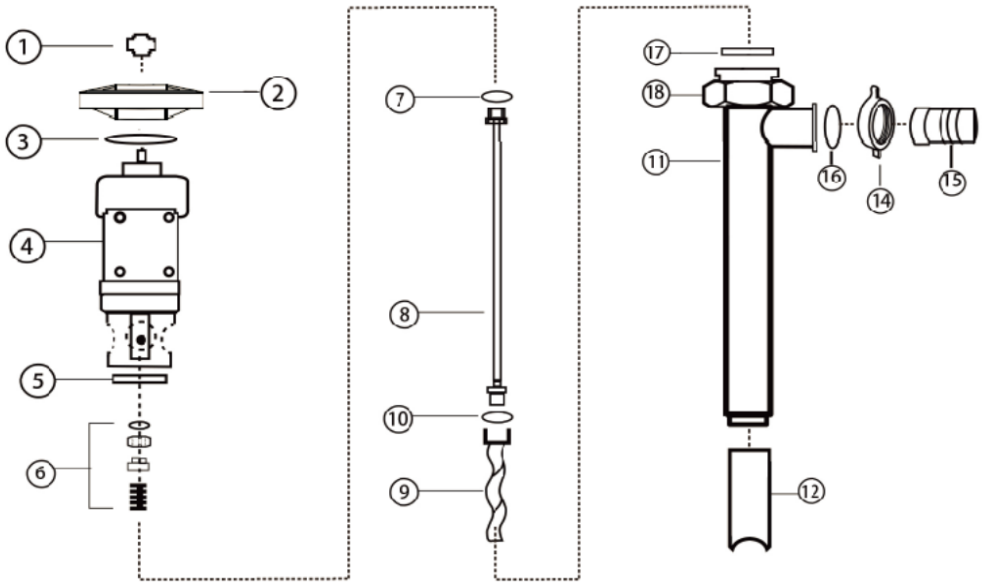

No.	Name	Order No.	No.	Name	Order No.
1	Coupling	**1R-0108**	11	Outer tube	**1R-0118**
2	Coupling Nut	**1R-0109**	12	Stator	**1R-0119**
3	Retaining ring	**1R-0110**	14	Union nut	**1R-0120**
4	Gear box	**1R-0111**	15	Hose fittings	**1R-0121**
5	Mechanical seal stationary ring	**1R-0112**	16	O-ring	**1R-0122**
6	Mechanical seal moving ring assembly	**1R-0113**	17	O-ring	**1R-0123**
7	Gasket	**1R-0114**	18	Lock nut	**1R-0124**
8	Transmission Shaft	**1R-0115**			
9	Screw	**1R-0116**			
10	Gasket	**1R-0117**			